

ELEV 111

ARDMORE

NZAR

HELICOPTER ARRIVAL/DEPARTURE (2)

AWIB: 121.0

UNICOM/UNATTENDED: 118.1

HELICOPTER — TOWER TLOF training circuit operation

- Monitor AWIB.
- Change to 118.1.
- Listen out to ascertain which runway is in use.
- Broadcast callsign and intentions prior to entering the TOWER TLOF training circuit.
- Activate landing lights or anti-collision lights if so equipped.
- Broadcast callsign and intentions immediately prior to lifting.
- Broadcast callsign, position, altitude and intentions when commencing downwind leg (unless at standard circuit height).
- Broadcast callsign, position and intentions when on final approach.
- Broadcast callsign and intentions after landing, if not vacating the TOWER TLOF.
- Be aware of possible aircraft operations on grass RWY 07/25, particularly in conditions of crosswind.
- TOWER TLOF pad number 4 is available for hover training only. Departures and arrivals from pad 4 are not permitted due to its close proximity to grass RWY 03/21.

ELEV 111

NZAR

HELICOPTER – TOWER TLOF TRAINING CIRCUIT

AWIB: 121.0

UNICOM/UNATTENDED: 118.1



ARTLOF-B

Changes from 4 JUN 09: TWR TLOF training circuit.