

ELEV 4

NZDN

TOWER: 120.7 122.4

ATIS: 126.45

UNATTENDED: 120.7

**DUNEDIN****VFR ARRIVAL PROCEDURES****For flights entering the Dunedin CTR/D and landing at Dunedin****General**

Listen to ATIS for conditions at Dunedin Airport.

Prior to entering Dunedin CTR/D contact Dunedin Tower and give abbreviated report:

- Aircraft callsign
- Position relative to visual reporting point
- Altitude

On receipt of clearance, follow assigned procedures or instructions.

**Arrival Procedures**

***If a clearance is not available remain outside Dunedin CTR/D or proceed to Taieri via VFR Transit Lanes T955 Dunedin City, T958 Taieri and T959 Mt Hyde.***

**Communications Failure**

Outside Dunedin CTR/D    Remain clear of CTR/D and proceed to alternative aerodrome, or proceed to Taieri via VFR Transit Lanes T955, T958 and T959. Report arrival to Dunedin Tower.

Within Dunedin CTR/D    Follow assigned clearance and instructions. If joining instructions for Dunedin have not been issued carry out standard overhead rejoin. Maintain VFR — look for light signals from Tower.

