

ELEV 4

DUNEDIN

NZDN

VFR DEPARTURE PROCEDURES

TOWER: 120.7 122.4

ATIS: 126.45

UNATTENDED: 120.7

For flights departing Dunedin and leaving the Dunedin CTR/D***General***

Listen to ATIS for conditions at Dunedin Airport.

Before entering Dunedin manoeuvring area, contact Dunedin Tower advising:

- Aircraft callsign
- Destination

Dunedin Tower will issue departure clearance and/or instructions.

Departure Procedures

After take-off follow clearance. If intending to enter the Dunedin CTA/D a specific clearance from Dunedin Tower is required.

Communications Failure

Within Dunedin CTR/D Follow assigned clearance and instructions to vacate the Dunedin CTR/D.
Aircraft departing Taieri can remain in T955, T958 and T959 and return to Taieri.

