

ELEV 41

NZWN

TOWER: 118.8 125.25


APPROACH: 122.3

GROUND: 121.9 118.8

ATIS: 126.9

WELLINGTON

VFR ARRIVAL PROCEDURES (1)

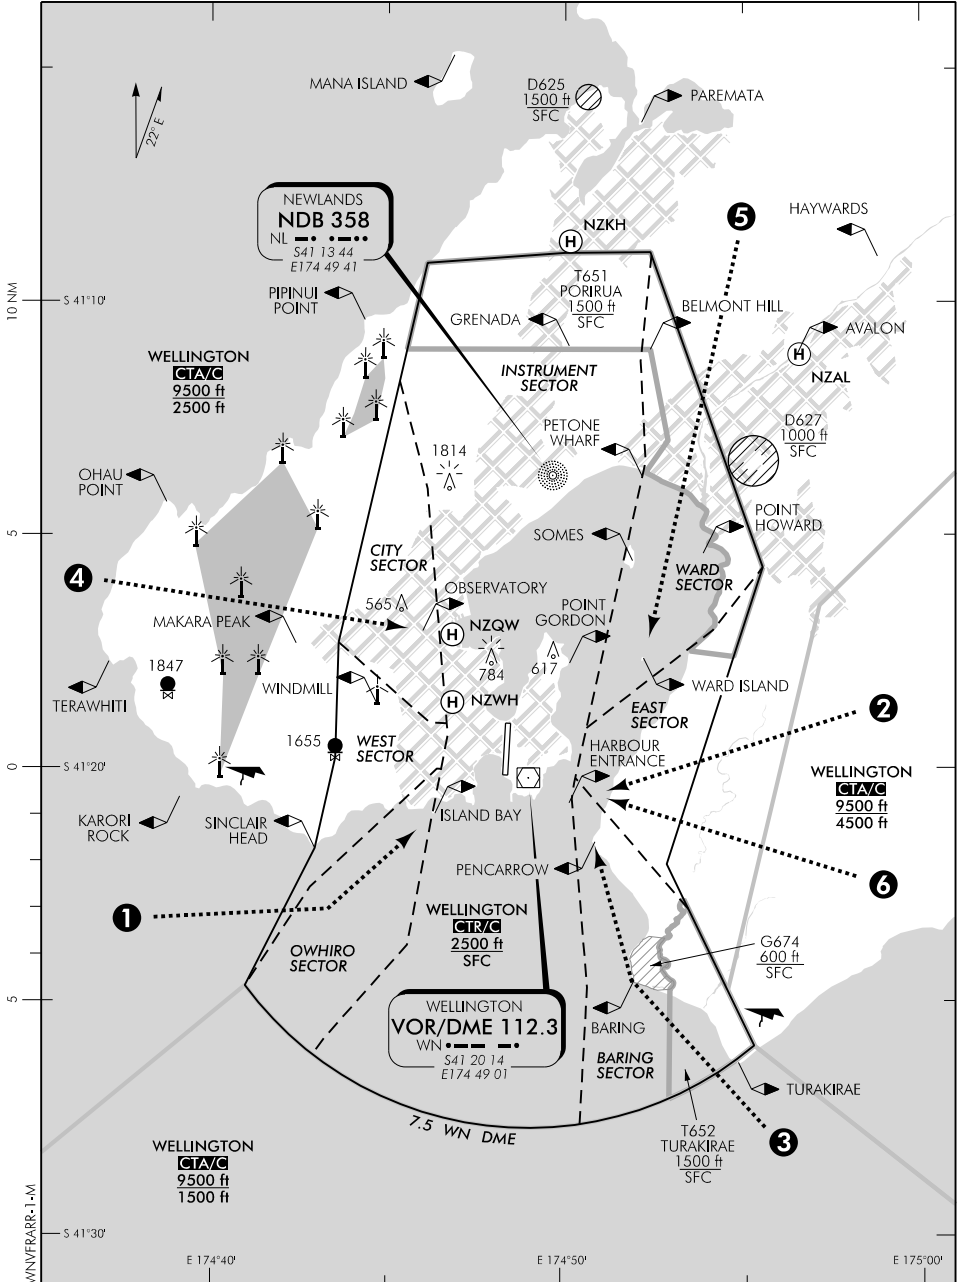

Changes from 19 JUL 18: CTR and CTA amended, VRPs and Transit lanes updated, new VFR tracks.

Effective: 8 NOV 18

© Civil Aviation Authority

WELLINGTON VFR ARRIVAL PROCEDURES (1)

WELLINGTON

ELEV 41

NZWN

VFR ARRIVAL PROCEDURES (2)

TOWER: 118.8 125.25

APPROACH: 122.3

GROUND: 121.9 118.8

ATIS: 126.9

REFER TO DIAGRAM ON PREVIOUS PAGE AND VISUAL NAVIGATION CHARTS.**For VFR flights entering the Wellington CTR/C and landing at Wellington INTL Airport.****General**

Listen to ATIS.

When Runway 16 is in use expect routing via the City or Ward Sectors.

When Runway 34 is in use expect routing via the Owhiro or Baring Sectors.

Prior to entering Wellington CTR/C contact Wellington Tower and give an abbreviated report:

- Aircraft callsign
- Position relative to visual reporting point
- Altitude

If a higher altitude than those shown in the procedures below is required, call Wellington Tower as early as possible before the CTR/C boundary.

Altitude, routing and reporting instructions may be varied by Wellington Tower.

Arrival Procedures**If a clearance is not available remain outside Wellington CTR/C and proceed to alternative aerodrome.****Designator****Route****RWY 34****① 34 Owhiro ARR**

Enter and track via West and Owhiro sectors at 1500 ft or below. Report approaching Island Bay for joining instructions. If joining instructions are not issued — hold in the Owhiro Sector.

② 34 East ARR

Enter and track via East Sector 1500 ft or below. Report approaching Harbour Entrance for joining instructions. If joining instructions are not issued — hold in the East Sector.

③ 34 Baring ARR

Enter and track via Baring Sector at 1500 ft or below. Report approaching Pencarrow for joining instructions. If joining instructions are not issued — hold in the Baring Sector.

RWY 16**④ 16 City ARR**

Enter and track via City Sector at 2500 ft or below. Report approaching Observatory for joining instructions. If joining instructions are not issued — hold in the City Sector.

⑤ 16 Ward ARR

Enter and track via Ward Sector at 1500 ft or below unless otherwise instructed. Report approaching Ward Island for joining instructions. If joining instructions are not issued — hold in the Ward Sector.

⑥ 16 East ARR

Enter and track via East Sector at 1500 ft or below. Report crossing the shoreline for joining instructions. If joining instructions are not issued — hold in the East Sector.

N.B. Clearance to operate within the Hutt Sector 1500 ft and below is only required at night.

D