ELEV 85

TAIERI

NZTI

VFR ARRIVAL PROCEDURES

DUNEDIN TOWER: 120.7 122.4 DUNEDIN ATIS: 126.45

UNATTENDED: By day & TWR on watch = 119.1 TWR off watch = 120.7

For flights entering the Dunedin CTR/D and landing at Taieri

General

Listen to ATIS for conditions at Dunedin Airport.

Prior to entering Dunedin CTR/D contact Dunedin Tower and give abbreviated report:

- Aircraft callsign
- Position relative to visual reporting point
- Altitude

On receipt of clearance, follow assigned procedures or instructions.

Arrival Procedures

If a clearance is not available remain outside Dunedin CTR/D or proceed to Taieri via VFR Transit Lanes T955 Dunedin City and T958 Taieri.

Communications Failure

Outside Dunedin CTR/D Remain clear of CTR/D and proceed to alternative aerodrome,

or proceed to Taieri via VFR Transit Lanes T955 and T958.

Report arrival to Dunedin Tower.

Within Dunedin CTR/D Follow assigned clearance and instructions. If joining instructions

for Dunedin have not been issued carry out standard overhead

rejoin. Maintain VFR — look for light signals from Tower.

