


ELEV 123

NZCH

CHRISTCHURCH

GROUND MOVEMENTS (3)

TOWER: 118.4 119.65 GROUND: 121.9 119.65 DELIVERY: 128.2 ATIS: 127.2 FIRE: 134.7

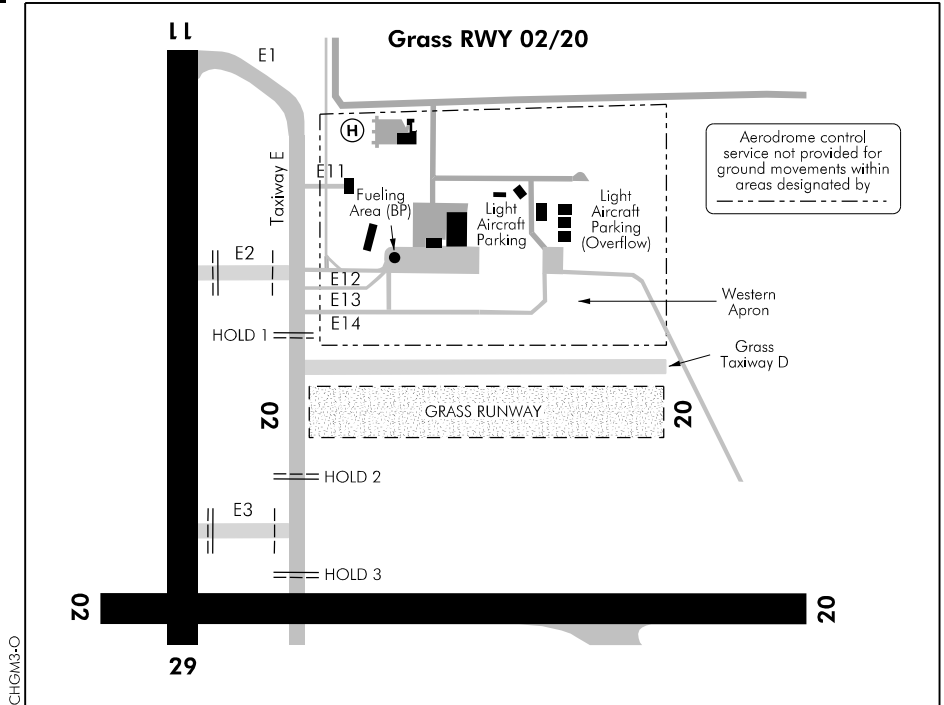

Changes from 25 MAY 17: FIRE FREQ added to COM header.

Communication

Departing Aircraft – IFR except Western Apron

Caution: SMC is provided to aircraft on the Western Apron using this frequency

- Call DELIVERY up to a maximum of 15 minutes prior to start advising stand number or location on aerodrome and receipt of ATIS. If not already advised, international flights pass level, domestic flights pass level and alternate.
- ATC clearance will normally be issued within 2 minutes.
- When ready to start call GROUND. Request pushback if necessary. Any start delay will be advised at this time.
- Aircraft that are using the paved runway for departure must be ready for take-off on reaching the holding position. Contact TOWER when approaching the holding position.

(Continued on GROUND MOVEMENTS (4) - NZCH AD 2 - 53.4)

Effective: 10 SEP 20

ELEV 123

NZCH

**CHRISTCHURCH
GROUND MOVEMENTS (4)**

TOWER: 118.4 119.65 GROUND: 121.9 119.65 DELIVERY: 128.2 ATIS: 127.2 FIRE: 134.7

Departing Aircraft — IFR from Western Apron

- When requesting clearance by RTF call DELIVERY up to a maximum of 15 minutes prior to start advising location on aerodrome and receipt of ATIS. If not already advised, international flights pass level, domestic flights pass level and alternate. ATC clearance will normally be issued within 2 minutes.
- Call DELIVERY when ready to start. Any start delay will be advised at this time.
- Aircraft that are using the paved runway for departure must be ready for take-off on reaching the holding position. Contact TOWER when approaching the holding position.

Departing Aircraft — VFR except Western Apron

- Prior to start-up for departure pilots should submit a Local VFR Flight Notification via IFIS (www.ifis.airways.co.nz) to provide flight details to Christchurch Tower.
- When ready to taxi contact GROUND, advise stand number or location on aerodrome and advise receipt of ATIS. GROUND may issue VFR departure procedure.
- Once at the holding point for the runway to be used, and ready for departure, contact TOWER. VFR departure procedure (if not already issued) or circuit instructions will be issued by TOWER.

Departing Aircraft — VFR from Western Apron

- Prior to start-up for departure pilots should submit a Local VFR Flight Notification via IFIS (www.ifis.airways.co.nz) to provide flight details to Christchurch Tower.
- When ready to taxi contact DELIVERY, advise location on aerodrome and advise receipt of ATIS. DELIVERY may issue VFR departure procedure.
- Once at the instructed holding point and ready for departure, contact TOWER. VFR departure procedure (if not already issued) or circuit instructions will be issued by TOWER.

Arriving Aircraft — All except Western Apron

- Contact GROUND when vacating the runway, advise intended stand number or location on aerodrome. Itinerant aircraft parking is not available on international apron.

Arriving Aircraft — All to Western Apron

Unless otherwise advised by TOWER —

- When RWY 02/20 is the nominated runway-in-use, remain on TOWER when vacating the runway, advise intended location on aerodrome.
- When RWY 11/29 is the nominated runway-in-use, contact GROUND when vacating the runway, advise intended location on aerodrome.