

ELEV 23

AUCKLAND


NZAA

MINIMUM RUNWAY OCCUPANCY – RWY 05R ARRIVAL

TOWER: 118.7 120.95 DELIVERY: 128.2 GROUND: 121.9 APRON: 123.0 ATIS: 127.8 127.0

AA-MRO05RARR-A

ACFT type	Preferred Exit	Exit	Destination (if applicable)	Ground/ taxi instructions
Heavy Jet	A3	A1A, A1 or A2	International Terminal/Apron (including remote stands 74 to 84) Domestic Terminal/Apron (including stands 7 to 73 or eastern end parking)	Specific instructions issued by Tower. Turn LEFT onto TWY A, hold short of TWY B4. Contact Ground clear of runway. Hold on TWY A3 at intersection with TWY A. Contact Ground clear of runway.
Medium* (* medium jets to advise requirement to exit TWY A3 on first contact with Tower)	A3		All Stands	Hold on TWY A3 at intersection with TWY A. Contact Ground clear of runway.
Medium	A5		International Terminal/Apron (including remote stands 74 to 84) All stands east of and including Stand 28 Stands 20 to 24 and bays 70 to 73	Turn LEFT onto TWY A, hold short of TWY B6. Contact Ground clear of runway. Hold on TWY A at intersection B5. Contact Ground clear of runway. Turn LEFT onto TWY A, hold short of TWY B6. Contact Ground clear of runway.
Light	A7			Light aircraft only (unless otherwise approved by Tower). Once over hold bar, hold short of intersection with TWY A. Contact Ground clear of runway. Specific instructions advised by Tower.
		Other exits Exits on other taxiways		Contact Ground as soon as possible when clear of runway.

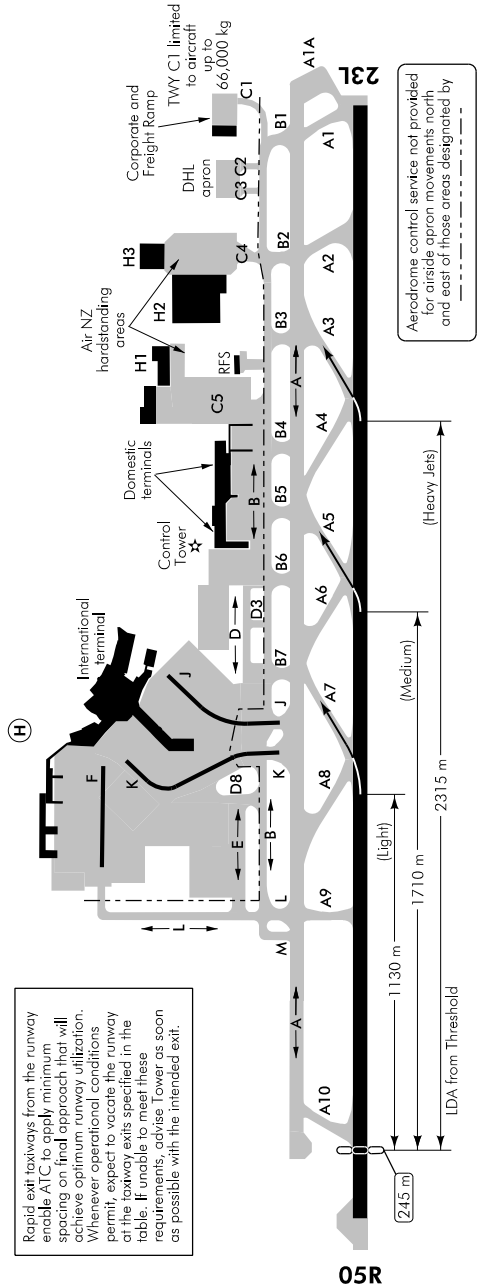


New chart.

ACFT type	Preferred Exit	Exit	Destination (if applicable)	Ground/taxi instructions
		A10		All traffic turn RIGHT onto TWY A, hold short of TWY M. Contact Ground clear of runway.
		A9		Cross TWY A, hold on Lima, short of TWY B. Contact Ground clear of the taxi to stand area (with add-ons for TWY D8, Kilo or Juliette).
				Turn LEFT onto TWY A. Hold short of TWY L. Contact Ground clear of runway. Expect further taxi to stand via Lima/Breva, Lima/Echo or Lima/Foxrot (with add-ons for TWY D8, Kilo or Juliette).
All Jets	A8		International Terminal/Apron (Including remote stands 74 to 84)	Turn RIGHT onto TWY A, hold short of TWY K. Contact Ground clear of runway.
Jets, on request/ Turbo-prop	A6		Domestic Terminal/Apron or Eastern end parking	Turn RIGHT onto TWY A, hold short of B6. Contact Ground clear of runway. Jets require specific approval from Tower to exit here.
Light	A4			Light aircraft only (unless otherwise approved by Tower). Once over A4 hold bar, hold short of intersection with TWY A. Contact Ground clear of runway.
		Other exits		Specific instructions advised by Tower.

Rapid exit taxiways from the runway enable ATC to apply minimum spacing on final approach that will achieve optimum runway utilization. Whenever operational conditions permit, expect to vacate the runway at the taxiway exits specified in the table. If unable to meet these requirements, advise Tower as soon as possible with the intended exit.

Aerodrome control service not provided for outside apron movements north and east of those areas designated by - - - - -

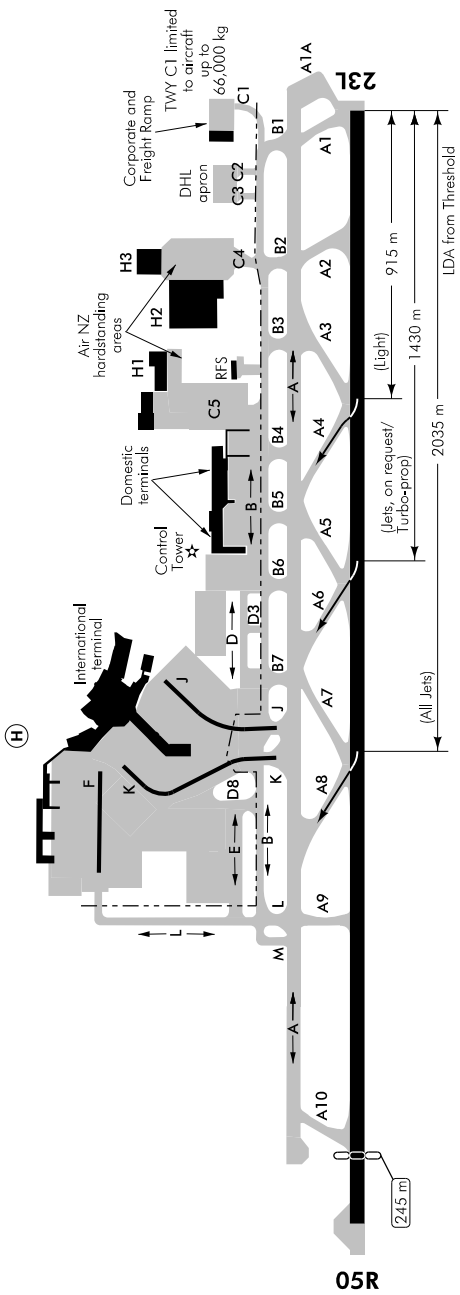

New chart.

AAMRO23LARR-A